Robot ordering method description

In the order format for the YAMAHA single-axis robots FLIP-X series, the notation (letters/numbers) for the mechanical section is shown linked to the controller section notation.

[Example]

Brake

■ Mechanical ► F8

- Lead ≥ 20mm
- Yes • Origin position ▷ Non-motor side
- Standard
 Standard **⊳** 500mm
- Controller ▶ SR1-X
 - Usable for CE ▶ Not required
- I/O selection ▷ NPN
- Regenerative unit ▷ Not required
- Battery ▶ With battery

Ordering method

F8-20-BK-Z-500-3L-SR1-X-05-N-B

Grease


Stroke


This page describes using the ordering form for mechanical components.

To find detailed controller information see the controller page.


SR1-X▶ (2377), TS-X▶ (2354), RDX▶ (2365)

Mechanical section

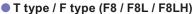


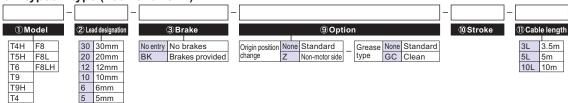




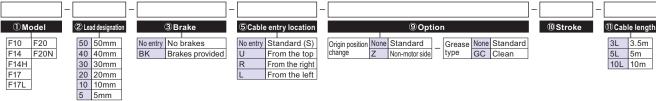


N type (Single carriage)

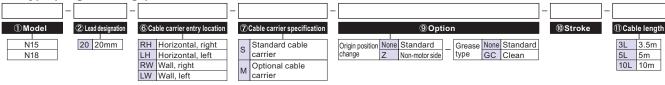


N type (Double carriage)

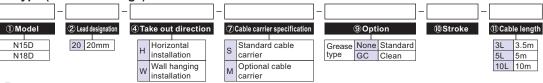


B type

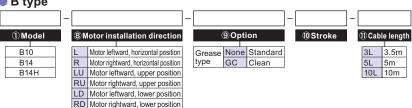

YMS type

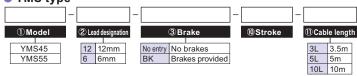

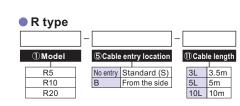

Robot ordering method terminology

① Model	Enter the robot unit model.
② Lead designation	Select the ball screw lead.
③ Brake	Select Brake or No-brake. Horizontal specs: No-brake Vertical specs: with Brake
④ Take out direction	Select what direction to install the robot (horizontal / wall mounted).
⑤ Cable entry location	Select what direction to extract the robot cable connecting the robot and controller.
6 Cable carrier entry location	Select what direction to install the robot (horizontal / wall mounted) and what direction to extract the robot cable carrier. RH Horizontal, right RW Wall, right LH Horizontal, left LW Wall, left Note. Be sure to install in the direction as specified (in cable carrier take-out direction drawing and various specification drawings) individually. Installation in any other way will cause a failure. For requirement of installation in any way other than the above standard installation, please consult YAMAHA as special arrangement will be available.
⑦ Cable carrier specification	Select the cable carrier size for the customer wiring. Stype standard cable carrier M type Optional cable carrier Another Space for optional cable for users Space for optional cable for users
Motor installation direction	Select what direction to install the motor. Lipp Leftward at horizontal position
Option	Origin position change: Origin point position can be changed.
	Grease type: Clean grease can be selected.
10 Stroke	Select the stroke for the robot movement range.
① Cable length	Select the robot cable length to use for connecting the robot to the controller. 3L : 3.5m (standard) 5L : 5m 10L : 10m 3K : 3.5m (Bend-resistant cable) 5K : 5m (Bend-resistant cable) 10K : 10m (Bend-resistant cable)